

Instructions for Setting Up a VocoPro Karaoke Machine

1. **Power On the Machine** – Plug the machine into a power source and turn it on using the power button.

Using a DVD

2. **Insert DVD** – Open the **DVD tray located in the upper left corner** of the machine and insert your DVD.
3. **Enable DVD Mode** – Press the **DVD button** on the **bottom right** of the **front panel** to switch to DVD playback mode.

Using MP3 (Laptop/AUX Connection)

4. **Connect Audio via AUX** – Plug an AUX cable from your laptop or other audio device into the **MP3 input** on the **front of the machine**.
5. **Enable MP3 Mode** – Press the **MP3 button** located on the **bottom right** of the **front panel** to activate this mode.

Using USB

6. **Insert USB Drive** – Plug a USB flash drive into the **USB port on the front** of the machine.
7. **Enable USB Mode** – Press the **USB button** in the **bottom right** of the **front panel** to select USB as the audio source.

Microphone Setup

8. **Connect Microphones** – Plug the RCA end of the microphone cable into the **RCA input on the front left** of the machine and connect the other end to the **bottom of the microphone**.
9. **Adjust Microphone Effects** – Use the **effects controls** located **underneath the LCD screen** to modify echo, reverb, or other vocal effects.

Final Adjustments & Power Down

10. **Test Audio and Adjust Levels** – Play audio from your selected input source and adjust volume levels for both the music and microphone.
11. **Optimize Sound Settings** – Adjust bass, treble, and balance controls as needed for the best sound experience.
12. **Power Down Properly** – When finished, lower volume levels, turn off the machine, and unplug it if necessary.