

Steps to Set Up and Use an EPSON LCD Projector CO-W01

1. **Unpack the Projector** – Remove the projector and accessories from the box.
2. **Position the Projector** – Place the projector on a stable surface or mount it as needed, ensuring it faces the projection screen or wall.
3. **Connect the Power Cable** – Plug the projector into a power outlet and turn it on using the **power button** on the machine.
4. **Connect Your Device** – Use an **HDMI cable, USB, or VGA cable** (depending on your device) to connect your laptop, streaming device, or media player to the projector. Inputs will be on the side of the projector.
5. **Select Input Source** – Press the **Source Search** button on the remote (Top right button) to choose the correct input (HDMI, USB, etc.).
6. **Adjust the Image** – Use the **focus ring, keystone correction and zoom controls** to sharpen and properly align the image on the screen. If the image is tilted upwards/downwards or skewed sideways, try adjusting the keystone using the **Middle Gray** button on the top row of buttons.
7. **Adjust Audio (If Needed)** – Connect external speakers using the USB port on the side or use the projector's built-in speaker for sound output.
8. **Optimize Display Settings** – Access the **menu settings** to adjust brightness, contrast, and color settings for the best image quality.
9. **Start Your Presentation or Media** – Play your video, presentation, or content from the connected device.
10. **Power Off Properly** – Press the **power button** to turn off the projector, allow the fan to cool down, and unplug it when finished.

If you are using the EX3240 Please see attached manual.